

## Setting the Label Scanner

**Only to be done if the Labels keep feeding without stopping**

- 1 To Adjust release the Adjusting Screw slightly so it can be moved but will not move without Pressure being applied
- 2 Now the Scanner needs to be lowered until you hear it switch on (click) then raised backup until it just switch back off (click)
- 3 Now Lock the Adjusting Screw back up
- 4 Test run the machine

